



**Bags**

# Accompaniments



As our tools become smaller, lighter and more independent, cellphones, disc players, MP3 players, PDAs and cameras are now with us wherever we go - shopping, meeting with friends, in discos, at family celebrations, on weekend trips and on holidays. Micro electronics, wireless technology and digitization make it possible.

As the camera became digital, film mutates to a memory card, „photographic equipment“ needs less space and photo bags must either be small or multi-functional these days.

The cleverly designed Kaiser bag assortment is geared to this simple insight. Aside from the small belt bags being like a protective second skin for compacts and small digicams, the Kaiser bags are all-purpose companions with a „photo department“. You will find many small details like the separate mobile phone bag attached to the shoulder strap, openings for the player's headphone cable, a place for your rain jacket, inner pockets for cards and tickets or the mesh pocket for the candy bar.

If the „photo department“ is not needed, it can often be removed completely and its space can be used for other things. Now you can understand why „slash\bag“, „EZpack“ and „disCover“ do not look like classic photo bags, and this has other advantages as well.

And this is why the bags presented on the following pages only are cute, convenient and, above all, practical accompaniments. You would not raise any objections to some company, wouldn't you?

**8238/40**  
**„Zack micro“ Camera Bag**

Belt pouch made of flexible Neoprene for subcompact cameras up to 11 x 7 x 4 cm (4.3 x 2.8 x 1.6 in.) Elastic fabric bands on both sides allows for different camera thickness. Internal memory card pocket. Securing clip for camera strap. Velcro closure.

**8238:** black  
**8240:** silver-grey/black



**8244-45**  
**„Zack macro“ Camera Bag**

Belt pouch made of flexible Neoprene for compact cameras up to 13.5 x 8.5 x 4.5 cm (5.3 x 3.3 x 1.8 in.) Elastic fabric bands on both sides allows for different camera thickness. Internal memory card pocket. Securing clip for camera strap. Velcro closure.

**8244:** black  
**8245:** silver-grey/black



**8250-51**  
**„digiTouch soft“ Camera Bag**

Soft pouch for subcompact cameras. Velvety inside lining protects camera body and monitor. Internal memory card pocket. Large lid with Velcro closure and additional zipper underneath. Securing clip for camera strap. Belt clip. Black structured imitation leather.

**8250:** for cameras up to approx. 10.5 x 8 x 3 cm (4.1 x 3.1 x 1.2 in.)  
**8251:** for cameras up to approx. 12 x 8 x 3 cm (4.7 x 3.1 x 1.2 in.)



**8252-53**  
**„digiTouch trend“ Camera Bag**

Rugged pouch for subcompact cameras. Velvety inside lining protects camera body and monitor. Internal memory card pocket. Large lid with Velcro closure and additional zipper underneath. Securing clip for camera strap. Belt clip. Black nylon fabric.

**8252:** for cameras up to approx. 10.5 x 8 x 3 cm (4.1 x 3.1 x 1.2 in.)  
**8253:** for cameras up to approx. 12 x 8 x 3 cm (4.7 x 3.1 x 1.2 in.)





**8803-04**  
**„digilog 2“ Camera Bag**

Belt pouch/shoulder bag for digital and compact cameras up to 11 x 7.5 x 4.5 cm (4.3 x 3 x 1.8 in.). Internal memory card pocket. Lid with double zippers. Two elastic outside mesh pockets for accessories. Belt loop and detachable shoulder strap, adjustable in length.

**8803:** black/silver

**8804:** black /cobalt blue



**8821-22**  
**„cuBag 1“ Photo/Video Camera Bag**

Universal bag for smaller photo or video equipment. Light gray inner compartment with variable dividers. Main lid with mesh pocket underneath, opens away from user. Document pocket at the body side. Spacious front pocket with zipper, covered by the main lid with Velcro closure. Two belt loops and detachable and adjustable shoulder strap with shoulder rest. Grab handle.

Inside dimensions of camera compartment: approx. 14 x 9 x 14 cm (5.5 x 3.5 x 5.5 in.)

Outside dimensions (WxHxD): approx. 16 x 14 x 15 cm (6.3 x 5.5 x 5.9 in.)

**8821:** black/silver

**8822:** black/cobalt blue



**8823-24**  
**„cuBag 2“ Photo/Video Camera Bag**

Universal bag for medium sized photo or video equipment. Light gray inner compartment with variable dividers. Main lid with mesh pocket underneath, opens away from user. Document pocket at the body side. Spacious front pocket with zipper, covered by the main lid with Velcro closure. Two belt loops and detachable and adjustable shoulder strap with shoulder rest. Grab handle.

Inside dimensions of camera compartment: approx. 22 x 12 x 18 cm (8.7 x 4.7 x 7.1 in.)

Outside dimensions (WxHxD): approx. 23 x 17 x 19 cm (9.1 x 6.7 x 7.5 in.)

**8823:** black/silver

**8824:** black/cobalt blue

**8853**

### „slash\bag“ Shoulder Bag

Multi-purpose bag with diagonal strap. Main compartment with space for photo or video equipment housed in a removable tray with variable dividers and light gray inner lining. Additional space on top of the camera tray. Two zipped outside pockets and a mesh pocket for smaller things. Reflective stripes. Wide shoulder strap with buckle closure and shoulder pad.

Inside dimensions of camera tray: approx.  
23 x 11 x 15 cm (9 x 4.3 x 9.9 in.)

Outside dimensions (WxHxD): approx.  
33 x 14 x 38 cm (13 x 5.5 x 15 in.)



**8854**

### „disCover“ Shoulder Bag

Multi-purpose bag with diagonal strap. Main compartment with space for photo or video equipment housed in a removable tray with variable dividers and light gray inner lining. Additional space on top of the camera tray. Additional slide-in pocket and zipped mesh pocket. Opening for headphone cable of CD or MP3 player. Front side with smaller zipped pocket and spacy document pocket with lid and buckle closure. Safety belt for main compartment. Wide shoulder strap with buckle closure and cell phone pocket. .

Inside dimensions of camera tray: approx.  
29 x 9 x 14.5 cm (11.4 x 3.5 x 5.7 in.)

Outside dimensions (WxHxD): approx.  
31 x 12 x 31 cm (12.2 x 4.7 x 12.2 in.)





### 8858 „EZpack“ Multi-Purpose Backpack

Compact backpack made of elegant sleek nylon fabric. Main compartment with space for photo or video equipment housed in a removable, padded tray with lid and variable dividers. Large mesh pocket and small pocket for cash inside. Front pocket with organizer trays and mesh pocket. Reflective zipper. Adjustable shoulder strap with padded rest. Grab handle.

Inside dimensions of camera tray: approx.  
25 x 10 x 20 cm (9.8 x 3.9 x 7.9 in.)  
Outside dimensions (WxHxD): approx.  
30 x 15 x 40 cm (11.8 x 5.9 x 15.7 in.)



### 8861-62 Multi-Purpose Backpack

Backpack with separate compartments for camera equipment and more. Bottom part with variable dividers for medium sized SLR equipment. Upper part with large space for additional things. Two separate front pockets for small things and documents. Reflective zipper. Outside mesh pockets. Zippers with rain covers. Adjustable carrying system with chest and hip belt and grab handle.

Inside dimensions of camera compartment:  
approx. 30 x 15 x 16 cm (11.8 x 5.9 x 6.3 in.)  
Outside dimensions (WxHxD): approx.  
33 x 20 x 43 cm (13 x 7.9 x 16.9 in.)

**8861:** black/silver

**8862:** black/cobalt blue